

MB 912AP

Removable Hard Drive Enclosure

**INSTALLATION
GUIDE**



Contents Description



Removable Hard Drive
Enclosure Rack Kit



Installation Guide




M3 x 6 screw *4 pieces
6#-32 screw *4 pieces
miniature key *2 pieces

<1.>Appearance

1-1 Front Panel Description

1. Power indicator
2. Key Hole
3. Handle
4. HDD Access Indicator

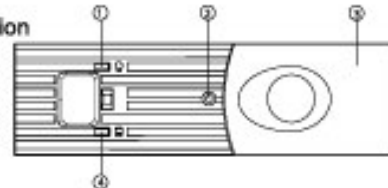


1-2 Power Indicator and HDD Access Indicator

When power is turned on, the indicator will displays the following:


Item	Indicator
Power Indicator	Green LED
HDD Access Indicator	Amber LED

<2.> Installing the device

Step 1 Use the miniature key provided and insert into the key hold to eject handle. (a)

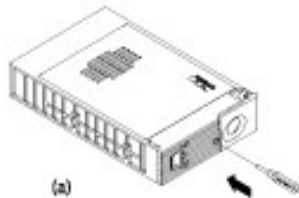


Step 2 Pull the handle outwards to remove the carrier away from the U-frame. (b)

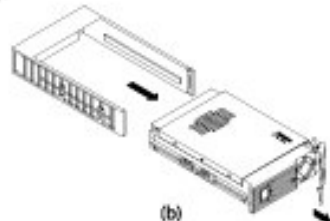


Step 3 Slide the top cover backwards to release. (c)




Step 4 To remove lift the top cover (d)

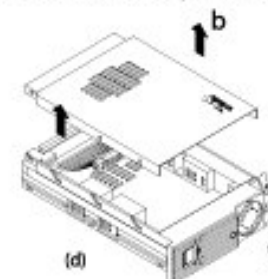


Step 5 Insert the DC power cable and IDE cable on the HDD.(e)

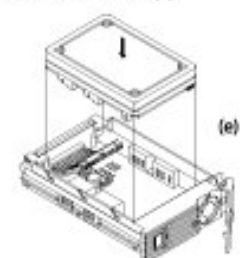


Step 6 Position the HDD into carrier body and secure the HDD using the four 6#-32 screws provided. (f)

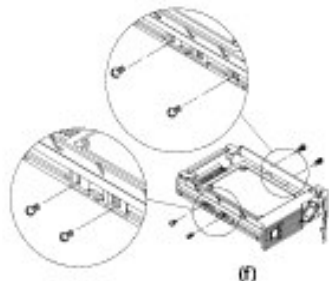


Step 7 Follow arrows "a" to cover the top, then secure cover following arrow "b". (g)

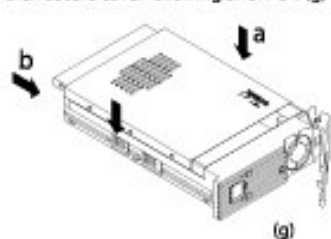

Step 8 Slide the carrier body back into the U-frame until the handle slowly shuts toward the front panel. (h)

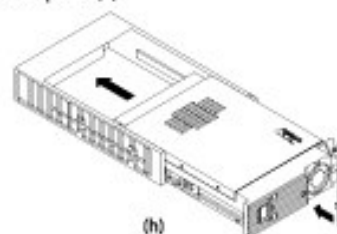

Step 9 Install the module into a 5.25" half-height expansion bay. Insert the DC power connector and the IDE cable connector of the user's chassis to the 40-pin connector located at the back-plane of the U-frame. Then, fully secure the module to the chassis by using the four M3x6 screws provided. (i)

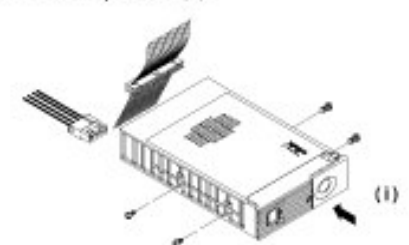

Note:

- The above testing results were obtained under the surrounding temp at 25°C.
- For any further inquiries about product application or more related product information, please access to: www.icydock.com.
- Any unrelated changes on the technical specification are subject to change without prior notice.
- We will not be liable responsible for any software, hardware, or other data stored within, or interfacing with our product which resulted to being damaged / dysfunctional. Cremax will only be responsible to repair / service its own product.